INTERACTIVE SCHEMATIC





This document is best viewed at a screen resolution of 1024 X 768.

To set your screen resolution do the following: **RIGHT CLICK** on the **DESKTOP**. Select **PROPERTIES**. **CLICK** the **SETTINGS TAB**. **MOVE THE SLIDER** under **SCREEN RESOLUTION** until it shows **1024 X 768**. **CLICK OK** to apply the resolution

The Bookmarks panel will allow you to quickly navigate to points of interest.



Click on <u>any text that is BLUE and underlined</u>. These are hyperlinks that can be used to navigate the schematic and machine views.

VIEW ALL CALLOUTS

When only one callout is showing on a machine view this button will make all of the callouts visible. This button is located in the top right corner of every machine view page.

HOTKEYS (Keyboard Shortcuts)				
	FUNCTION	KEYS		
+	Zoom In	"CTRL" / "+"		
	Zoom Out	"CTRL" / "-"		
	Fit to Page	"CTRL" / "0" (zero)		
Ser Contraction of the series	Hand Tool	"SPACEBAR" (hold down)		
	Find	"CTRL" / "F"		



CATERPILLAR®

Schematic

D11T Track-Type Tractor Cooling System

AMA1-UP MDG1-UP JEL1-UP JNS1-UP

Including Carry Dozer

COMPONENT LOCATION



Description	Part Number	Machine Location	Schematic Location
Cab-Heater	329-0315	1	<u>E-2</u>
Cooler - Engine Oil	358-2305	<u>2</u>	<u>B-3</u>
Cooler - LH NRS	363-3433	<u>3</u>	<u>A-6</u>
Cooler - RH NRS	363-3436	<u>4</u>	<u>A-5</u>
Cooler - XMSN OIL	312-3464	5	<u>B-3</u>
Pump Gp - Jacket Water	348-4037	6	<u>D-3</u>
Radiator Core (X2)	338-2217	X	<u>E-6, E-4</u>
Tank	335-5463	<u>8</u>	<u>F-5</u>
Temp Sensor - Thermostat	256-6453	9	<u>C-6</u>
Turbo (LH)	360-1240	<u>10</u>	<u>B-7</u>
Turbo (RH)	360-1241	11	<u>B-4</u>



Tap Number	Description	Schematic Location
<u>SOS</u>	Engine Coolant Sampling Port	<u>C-4</u>



ELECTRICAL SYMBOLS



Hydraulic Symbols (Electrical)





RIGHT SIDE ENGINE VIEW





LEFT SIDE MACHINE VIEW





NOx REDUCTION SYSTEM RIGHT SIDE VIEW





RADIATOR REAR VIEW



