


C10789X1

A-COMPONENTS INSIDE CAB

IDENT.	SCHEMATIC COMPONENTS	LOCATION	IDENT.	SCHEMATIC COMPONENTS	LOCATION
1	Alarm Backup	F-9	19	Starter	F-2
A	Alarm-Fault (EMS)	D-8	20	Starter	A-2
A	Alarm-Fire	C-9	21	Switch-Agent (Fire Suppression-Pressure)	A-9
2	Alternator	E-2	22	Switch-Agent (Fire Suppression-Pressure)	A-9
3	Batteries	A-3	23	Switch-Backup Alarm	E-7
4	Batteries	F-3	A	Switch-Blower Speed (A/C)	E-8
B	Breaker-Alternator	C-6	24	Switch-Brake	E-7
B	Breaker-Blower Motor	C-6	25	Switch-Disconnect	F-3
B	Breaker-Fire Suppression	C-6	A	Switch-Dome Lamp	B-8
B	Breaker-Key Start Switch	B-6	A	Switch-Dual Tilt	D-8
B	Breaker-Running Lamp	C-6	A	Switch-EMS Test	D-1
5	Control-Fire Suppression	A-8	26	Switch-Engine Coolant Flow (EMS)	C-6
A	EMS Panel	F-5	27	Switch-Engine Coolant Temperature (EMS)	C-1
A	Gauge-Engine Coolant Temperature	B-5	28	Switch-Engine Coolant Temperature (S.Aid)	E-3
A	Gauge-Hydraulic Oil Temperature	B-5	29	Switch-Engine Oil Pressure (EMS)	E-1
A	Gauge-Power Train Oil Temperature	B-5	30	Switch-Engine Oil Pressure (S. Meter)	E-1
6	Horns-Forward	F-1	31	Switch-Fire Detection (Temperature)	C-2
A	Meter-Service	B-5	32	Switch-Fire Detection (Temperature)	C-3
A	Monitor-Fire Suppression	E-7	33	Switch-Forward Horn	C-8
A	Motor-Blower	F-8	34	Switch-Fuel Pressure (EMS)	F-9
A	Motor-Blower	F-7	35	Switch-Hydraulic Oil Temperature (EMS)	A-9
7	Motor-Washer	D-9	A	Switch-Key Start	B-6
A	Motor-Wiper (Front)	D-7	36	Switch-Nitrogen Actuator (Pressure)	A-9
A	Motor-Wiper (Left)	E-7	37	Switch-Nitrogen Actuator (Pressure)	C-9
A	Motor-Wiper (Right)	D-9	38	Switch-Power Train Filter (Diff. Press.)	E-9
A	Motor-Wiper (Right)	B-6	39	Switch-Power Train Oil Temperature (EMS)	D-3
B	Relay-Main Power	B-4	40	Switch-Power Train Oil Temperature (Filter)	E-9
B	Relay-Start	B-5	41	Switch-Pressure (Fire Suppres. Discharge)	A-6
B	Relay-Start	B-4	A	Switch-Rear Flood Lamp	D-6
A	Resistor-Blower Motor Speed	F-8	42	Switch-Refrigerant Pressure (A/C)	F-3
8	Resistor-Start to Diag. Connector	F-2	A	Switch-Ripper Pin Puller	C-8
9	Resistor-Start to Diag. Connector	B-2	A	Switch-Running Lamp	E-6
10	Sender-Engine Coolant Temperature	E-1	A	Switch-Selector (A/C)	C-8
11	Sender-Hydraulic Oil Temperature	B-9	A	Switch-Side Flood Lamp	D-6
12	Sender-Power Train Oil Temperature	D-3	A	Switch-Start Aid	D-8
13	Solenoid-Air Conditioner Clutch	E-9	A	Switch-Thermostat (A/C)	F-7
14	Solenoid-Dual Tilt	F-1	A	Switch-Wiper (Left)	C-8
15	Solenoid-Engine Shutdown	D-1	A	Switch-Wiper (Left)	C-8
16	Solenoid-Nitrogen Actuator	C-9	A	Switch-Wiper (Right)	C-8
17	Solenoid-Ripper Pin Puller	D-9	A	Switch-Wiper (Right)	C-8
18	Solenoid-Start Aid	F-3	A	Switch-Wiper (Right)	C-8

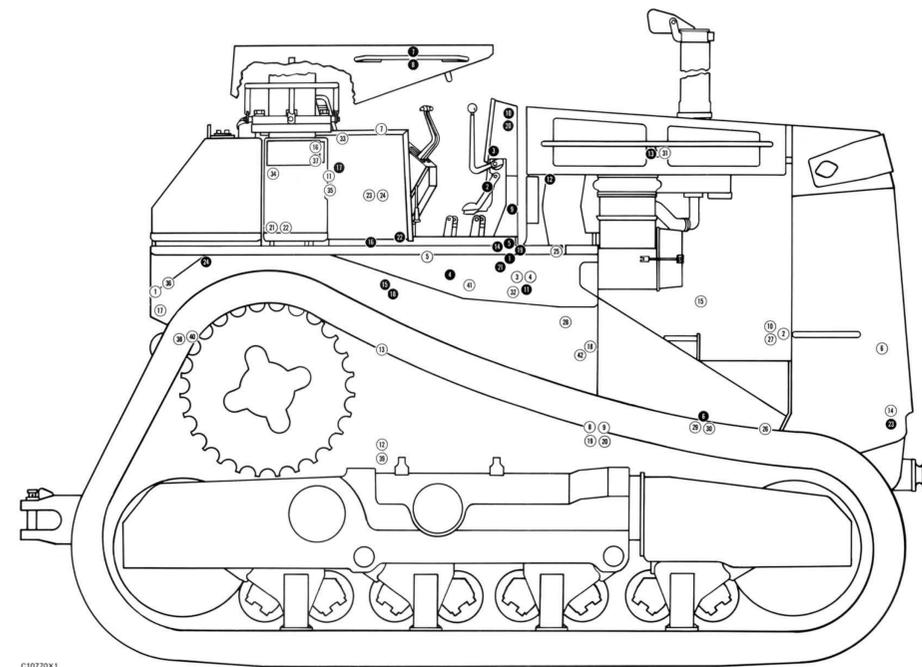

C10789X1

HARNES CONNECTOR AND COMPONENT LOCATIONS

CONNECTORS IDENT.	HARNES AND/OR COMPONENTS	SCHEMATIC LOCATION	CONNECTORS IDENT.	HARNES AND/OR COMPONENTS	SCHEMATIC LOCATION
25 CONTACTS	B-71395	E-4	B-71395	BATTERY	A-6
	D-71546	F-6	D-71546	HEAD LAMP	B-8
20 CONTACTS	D-71546	F-5	D-71546	KEY SWITCH	F-8
	Operator Monitor (EMS)	A-8	Operator Monitor (EMS)	OPERATOR MON PANEL	A-7
15 CONTACTS	D-71546	F-5	D-71546	WINDSHIELD WIPER SWITCH (RIGHT)	D-3
	H-71398	E-2	H-71398	WINDSHIELD WIPER SWITCH (LEFT)	D-3
10 CONTACTS	A-61823	E-2	A-61823	WINDSHIELD WIPER SWITCH (RIGHT)	D-3
	B-71395	E-2	B-71395	WINDSHIELD WIPER SWITCH (LEFT)	D-3
	F-71922	C-7	F-71922	WINDSHIELD WIPER SWITCH (RIGHT)	D-3
	G-71921	C-7	G-71921	WINDSHIELD WIPER SWITCH (LEFT)	D-3
8 CONTACTS	G-71921	C-7	G-71921	WINDSHIELD WIPER SWITCH (RIGHT)	D-3
	H-71398	E-2	H-71398	WINDSHIELD WIPER SWITCH (LEFT)	D-3
7 CONTACTS	R-71501	E-7	R-71501	WINDSHIELD WIPER SWITCH (RIGHT)	D-3
	RR-71501	E-7	RR-71501	WINDSHIELD WIPER SWITCH (LEFT)	D-3
	W-71762	D-9	W-71762	WINDSHIELD WIPER SWITCH (RIGHT)	D-3
6 CONTACTS	Y-71507	C-2	Y-71507	WINDSHIELD WIPER SWITCH (LEFT)	D-3

PROB NO.	FUNCTION	ACTUATE	DEACTUATE	NORMAL CONDITION
31925	Fire Supp. Agent (Pressure)	2270 kPa Max. (328.0 psi Max.)	1655 ± 138 kPa (240.0 ± 20.0 psi)	N.O.
31915	Coolant Flow	37 ± 3 g (1.3 ± 0.1 oz)	31 g Min. (1.1 oz Min.)	N.O.
79693	Engine Coolant Temp. (EMS)	107 ± 2.8°C (225 ± 5°F)	91°C MIN (198°F MIN)	N.C.
79693	Engine Coolant Temp. (Start Aid)	37 ± 2.8°C (100 ± 5°F)	26.7°C MIN (80°F MIN)	N.C.
6T4949	Engine Oil Pressure (EMS)	83 ± 21 kPa (13.5 ± 3.0 psi)	69 ± 21 kPa (10.0 ± 3.0 psi)	N.O.
6T4949	Engine Oil Pressure (S.Meter)	183 ± 8°C (360 ± 15°F)	-	N.O.
316962	Fuel Pressure (EMS)	83 ± 21 kPa (13.5 ± 3.0 psi)	69 ± 21 kPa (10.0 ± 3.0 psi)	N.C.
961300	Hydraulic Oil Temp. (EMS)	110 ± 2.8°C (230 ± 5°F)	101.7°C MIN (215°F MIN)	N.C.
6T6085	Fire Supp. Nitrogen Actuator (Press.)	1930 ± 138 kPa (279.5 ± 20.0 psi)	1655 ± 138 kPa (240.0 ± 20.0 psi)	N.O.
796960	Power Train Oil Temperature (EMS)	129 ± 2.8°C (265 ± 5°F)	118.3°C Min. (245°F)	N.C.
963341	Power Train Oil Temp. (Filter) (EMS)	51.7 ± 2.8°C (125 ± 5°F)	43°C MIN (110°F MIN)	N.C.
714371	Fire Suppression Discharge Pressure	83 ± 21 kPa (13.5 ± 3.0 psi)	69 ± 21 kPa (10.0 ± 3.0 psi)	N.O.


N.O. = NORMALLY OPEN N.C. = NORMALLY CLOSED

Schematic

D9L Tractor Electrical System

14Y3134-UP

CIRCUIT NUMBER	COLOR	POWER DISTRIBUTION CIRCUITS	CIRCUIT NUMBER	COLOR	MACHINE BASIC CIRCUITS (Cont.)	CIRCUIT NUMBER	COLOR	ACCESSORY CIRCUITS	CIRCUIT NUMBER	COLOR	CONTROL CIRCUITS (Cont.)
101	BU	BATTERY	314	PU	STARTER RELAY NO. 2 OUTPUT	500	BR	WINDSHIELD WIPER - FRONT (PARK)	721	BR	TRANSMISSION GEAR CODE 1
102	BU	HEAD LAMP	321	BR	BACKUP ALARM LAMP/TRAVEL	501	GR	WINDSHIELD WIPER - FRONT (LOW)	722	WH	TRANSMISSION GEAR CODE 2
103	WH	KEY SWITCH	322	GY	WARNING HORN (FORWARD)	502	OR	WINDSHIELD WIPER - FRONT (HIGH)	723	OR	TRANSMISSION GEAR CODE 3
104	WH	MAIN POWER RELAY/INPUF	323	WH	FUEL TRANSFER PUMP POWER	503	BR	WINDSHIELD WIPER - REAR (PARK)	724	YL	TRANSMISSION GEAR CODE 4
105	WH	ENGINE SHUT DOWN	324	BU	DIFFERENTIAL LOCKUP SOLENOID	504	YL	WINDSHIELD WIPER - REAR (LOW)	725	GN	TRANSMISSION GEAR CODE 5
106	WH	MISC WIPER DOOR LAMP, CIGAR LIGHTER	325	PK	FUEL PUMP RELAY OIL PRESS. SWITCH	505	PU	WINDSHIELD WIPER - REAR (HIGH)	726	GN	TRANSMISSION GEAR CODE 6
107	WH	WINDSHIELD WIPER SWITCH (RIGHT)	326	PU	KEY SWITCH "C" TERMINAL SHUT/DOWN SOLENOID	510	YL	WINDSHIELD WASHER REAR	727	BU	STEERING MOTOR RELAY
108	BU	ALTERNATOR	327	OR	SHUT/DOWN MODULE "OFF"	513	OR	AIR CONDITIONER COMPRESSOR MOTOR	728	BU	SUPPLEMENTAL STEERING
109	OR	WINDSHIELD WIPER SWITCH (RIGHT)	328	OR	MONITORING CIRCUITS	514	YL	WINDSHIELD WASHER PRIMER	733	BR	CONTROL SWITCH
110	GN	WINDSHIELD WIPER SWITCH (LEFT)	403	GN	SERVICE METER SWITCH	515	GN	AIR CONDITIONER COMPRESSOR MOTOR	734	WH	SWITCHING GEAR CODE 1 FRONT
111	OR	WINDSHIELD WIPER SWITCH (LEFT)	404	YL	ALTERNATOR OR TERMINAL OIL TEMP	516	GN	BLOWER MOTOR (HIGH)	735	OR	SWITCHING GEAR CODE 2 FRONT
112	PU	MAIN POWER RELAY/OUTPUT	405	GY	OPERATOR MON PANEL HYDRAULIC OIL TEMP	517	BU	BLOWER MOTOR (LOW)	736	GN	SWITCHING GEAR CODE 3 FRONT
113	OR	OPERATOR MON PANEL	406	PU	OPERATOR MON PANEL OIL TEMP	518	PK	THERMOSTAT TO DRYER	737	WH	SWITCHING GEAR CODE 4 REAR
114	GN	WARNING HORN (FORWARD)	407	PU	OPERATOR MON PANEL COOLANT PRESSURE	520	WH	OPERATOR AIR CONDITIONER SWITCH TO THERMOSTAT	741	YL	SWITCHING GEAR CODE 4 REAR
115	BR	FLOOD LAMP (REAR)	408	PK	TEMPERATURE	521	YL	AIR COND SW TO RIGHT SW	742	GN	SWITCHING GEAR CODE 5 REAR
116	BR	FLOOD LAMP (SIDE)	409	PK	CONV/RETRARDER OIL TEMP	522	WH	AIR COND COMP TO THERMO SW	743	PU	SWITCHING UP SOLENOID
117	YL	WINDSHIELD WIPER SWITCH (FRONT)	410	WH	OPERATOR MON PANEL BRAKE PRES. (AIR)	523	BR	WINDSHIELD WIPER-LEFT (PARK)	744	PU	SWITCHING DOWN SOLENOID
118	GY	WINDSHIELD WIPER SWITCH (REAR)	411	PK	OPERATOR MON PANEL NEUTRAL	524	GN	WINDSHIELD WIPER-LEFT (HIGH)	745	PK	SOLENOID
119	PK	WINDSHIELD WIPER SWITCH (REAR)	412	BU	OPERATOR MON PANEL FAULT	525	GN	WINDSHIELD WIPER-LEFT (LOW)	746	WH	SWITCHING NO SYNCHRONIZE SOLENOID
120	YL	CONVERTER (24 TO 10 V) ALARM TIMER	413	BR	FAULT LAMP	526	OR	WINDSHIELD WASHER (HIGH)	747	WH	SWITCHING NO SYNCHRONIZE SOLENOID
121	YL	BACKUP ALARM LAMP/TRAVEL ALARM TIMER	414	PK	OPERATOR MON PANEL COOLANT FLOW	527	GN	WINDSHIELD WASHER (LOW)	748	WH	TRANSMISSION LOCKUP CLUTCH SOLENOID
122	BU	AIR DRYER	415	OR	OPERATOR MON PANEL FUEL PRESSURE	528	WH	WINDSHIELD WASHER (LEFT)	749	GN	LEFT KEY/OUT SOLENOID SWITCH
123	WH	GAGES/SERVICE METER, TORQUE CONV SOLENOID	416	OR	OPERATOR MON PANEL LOW FUEL WARNING	533	RD	FIRE WARNING HORN	751	GN	LEFT KEY/OUT SOLENOID SWITCH
124	GN	FUEL TRANSFER PUMP	417	GY	OPERATOR MON PANEL TEST SWITCH	534	WH	FIRE WARNING LAMP	752	YL	TORQUE CONVERTER SOLENOID
125	PK	TRANSMISSION CONTROL	418	OR	OPERATOR MON PANEL TEST SWITCH	535	BU	TRAVEL ALARM TIMER PRESS. SWITCH	754	PU	SUPPLEMENTAL STEERING
126	OR	CKOUT SOLENOID SWITCH	419	YL	PRIMARY STEERING SWITCH	536	OR	TRAVEL ALARM TIMER MANUAL OVERRIDE	755	OR	APRON SOLENOID (SCRAPER)
127	OR	CKOUT SOLENOID SWITCH	420	OR	OPERATOR MON PANEL OIL TEMP	537	GR	TURN SIGNAL SWITCH TO FLASHER	756	OR	ANTISPIN PICKUP TRANSMISSION
128	BU	CKOUT SOLENOID SWITCH	421	OR	OPERATOR MON PANEL FUEL PRESSURE	538	BR	HAZARD INDICATOR	757	PU	ANTISPIN PICKUP LEFT
129	BU	CKOUT SOLENOID SWITCH	422	OR	OPERATOR MON PANEL FUEL PRESSURE	539	BU	TURN SIGNAL INDICATOR	758	PU	ANTISPIN PICKUP RIGHT
130	OR	CKOUT SOLENOID SWITCH	423	OR	OPERATOR MON PANEL FUEL PRESSURE	540	WH	TURN SIGNAL INDICATOR LEFT	759	PU	ANTISPIN PICKUP RIGHT
131	BR	FIRE CONTROL-OPERATOR WARNING	424	OR	OPERATOR MON PANEL FUEL PRESSURE	541	WH	TURN SIGNAL INDICATOR RIGHT	760	PU	ANTISPIN RETARDER SWITCH
132	PK	ANTISPIN CONTROL	425	OR	OPERATOR MON PANEL FUEL PRESSURE	542	OR	TURN SIGNAL INDICATOR LEFT	761	PU	ANTISPIN RETARDER SWITCH
133	OR	PROGRAMMED ELECTRONIC ENG CONT LOGIC	426	OR	OPERATOR MON PANEL FUEL PRESSURE	543	YL	TURN SIGNAL INDICATOR RIGHT	762	YL	ANTISPIN SERVOVALVE
134	PK	PROGRAMMED ELECTRONIC ENG CONT LOGIC	427	OR	OPERATOR MON PANEL FUEL PRESSURE	544	PK	SW-DUAL TILT	772	YL	ANTISPIN SOLENOID - LEFT
135	GN	SUPPLEMENTAL STEERING SWITCH	428	OR	OPERATOR MON PANEL FUEL PRESSURE	545	PK	SW-DUAL TILT TO SINGLE TILT	773	YL	ANTISPIN SOLENOID - RIGHT
136	GN	SUPPLEMENTAL STEERING SWITCH	429	YL	OPERATOR MON PANEL TEST SWITCH	546	PK	SOLE-DUAL TILT	774	YL	ANTISPIN SOLENOID - RIGHT
137	RD	STEERING MOTOR REDUCATOR	430	OR	OPERATOR MON PANEL TEST SWITCH	547	OR	OPERATOR MON PANEL WARNING HORN	775	WH	COUPLER DISENGAGE SOLENOID
138	GN	AUTOMATIC LUBE PUMP (TRUCK)	431	OR	OPERATOR MON PANEL TEST SWITCH	548	OR	OPERATOR MON PANEL TEST SWITCH	776	WH	COUPLER DISENGAGE SOLENOID
141	PK	AUXILIARY HEATER	432	OR	OPERATOR MON PANEL TEST SWITCH	549	OR	OPERATOR MON PANEL TEST SWITCH	777	WH	COUPLER DISENGAGE SOLENOID
200	BR	MAIN CHASSIS	433	OR	OPERATOR MON PANEL TEST SWITCH	550	OR	OPERATOR MON PANEL TEST SWITCH	778	WH	COUPLER DISENGAGE SOLENOID
201	BR	OPERATOR MONITOR PANEL	434	OR	OPERATOR MON PANEL TEST SWITCH	551	OR	OPERATOR MON PANEL TEST SWITCH	779	WH	COUPLER DISENGAGE SOLENOID
202	BR	TRANSMISSION CONTROL	435	OR	OPERATOR MON PANEL TEST SWITCH	552	OR	OPERATOR MON PANEL TEST SWITCH	780	WH	COUPLER DISENGAGE SOLENOID
203	BR	CHASSIS DIAGNOSTIC	436	OR	OPERATOR MON PANEL TEST SWITCH	553	OR	OPERATOR MON PANEL TEST SWITCH	781	WH	COUPLER DISENGAGE SOLENOID
204	BR	OPERATOR MONITOR PANEL	437	OR	OPERATOR MON PANEL TEST SWITCH	554	OR	OPERATOR MON PANEL TEST SWITCH	782	WH	COUPLER DISENGAGE SOLENOID
205	BR	INSTRUMENT	438	OR	OPERATOR MON PANEL TEST SWITCH	555	OR	OPERATOR MON PANEL TEST SWITCH	783	WH	COUPLER DISENGAGE SOLENOID
206	BR	BATTERY SIDE OF DISCONNECT	439	OR	OPERATOR MON PANEL TEST SWITCH	556	OR	OPERATOR MON PANEL TEST SWITCH	784	WH	COUPLER DISENGAGE SOLENOID
207	BR	STARTER DIAGNOSTIC	440	OR	OPERATOR MON PANEL TEST SWITCH	557	OR	OPERATOR MON PANEL TEST SWITCH	785	WH	COUPLER DISENGAGE SOLENOID
208	BR	STARTER DIAGNOSTIC	441	OR	OPERATOR MON PANEL TEST SWITCH	558	OR	OPERATOR MON PANEL TEST SWITCH	786	WH	COUPLER DISENGAGE SOLENOID
209	BR	STARTER DIAGNOSTIC	442	OR	OPERATOR MON PANEL TEST SWITCH	559	OR	OPERATOR MON PANEL TEST SWITCH	787	WH	COUPLER DISENGAGE SOLENOID
210	BR	ANTISPIN CODING PIN 15	443	OR	OPERATOR MON PANEL TEST SWITCH	560	OR	OPERATOR MON PANEL TEST SWITCH	788	WH	COUPLER DISENGAGE SOLENOID
211	BR	ANTISPIN CODING PIN 16	444	OR	OPERATOR MON PANEL TEST SWITCH	561	OR	OPERATOR MON PANEL TEST SWITCH	789	WH	COUPLER DISENGAGE SOLENOID
212	BR	ANTISPIN CODING PIN 17	445	OR	OPERATOR MON PANEL TEST SWITCH	562	OR	OPERATOR MON PANEL TEST SWITCH	790	WH	COUPLER DISENGAGE SOLENOID
213	BR	ANTISPIN CODING PIN 18	446	OR	OPERATOR MON PANEL TEST SWITCH	563	OR	OPERATOR MON PANEL TEST SWITCH	791	WH	COUPLER DISENGAGE SOLENOID
214	BR	ANTISPIN CODING PIN 19	447	OR	OPERATOR MON PANEL TEST SWITCH	564	OR	OPERATOR MON PANEL TEST SWITCH	792	WH	COUPLER DISENGAGE SOLENOID
215	BR	ANTISPIN CODING PIN 20	448	OR	OPERATOR MON PANEL TEST SWITCH	565	OR	OPERATOR MON PANEL TEST SWITCH	793	WH	COUPLER DISENGAGE SOLENOID
216	BR	ANTISPIN CODING PIN 21	449	OR	OPERATOR MON PANEL TEST SWITCH	566	OR	OPERATOR MON PANEL TEST SWITCH	794	WH	COUPLER DISENGAGE SOLENOID
217	BR	ANTISPIN CODING PIN 22	450	OR	OPERATOR MON PANEL TEST SWITCH	567	OR	OPERATOR MON PANEL TEST SWITCH	795	WH	COUPLER DISENGAGE SOLENOID
218	BR	ANTISPIN CODING PIN 23	451	OR	OPERATOR MON PANEL TEST SWITCH	568	OR	OPERATOR MON PANEL TEST SWITCH	796	WH	COUPLER DISENGAGE SOLENOID
219	BR	ANTISPIN CODING PIN 24	452	OR	OPERATOR MON PANEL TEST SWITCH	569	OR	OPERATOR MON PANEL TEST SWITCH	797	WH	COUPLER DISENGAGE SOLENOID
220	BR	ANTISPIN CODING PIN 25	453	OR	OPERATOR MON PANEL TEST SWITCH	570	OR	OPERATOR MON PANEL TEST SWITCH	798	WH	COUPLER DISENGAGE SOLENOID
221	BR	ANTISPIN CODING PIN 26	454	OR	OPERATOR MON PANEL TEST SWITCH	571	OR	OPERATOR MON PANEL TEST SWITCH	799	WH	COUPLER DISENGAGE SOLENOID
222	BR	ANTISPIN CODING PIN 27	455	OR	OPERATOR MON PANEL TEST SWITCH	572	OR	OPERATOR MON PANEL TEST SWITCH	800	WH	COUPLER DISENGAGE SOLENOID
223	BR	ANTISPIN CODING PIN 28	456	OR	OPERATOR MON PANEL TEST SWITCH	573	OR	OPERATOR MON PANEL TEST SWITCH	801	WH	COUPLER DISENGAGE SOLENOID
224	BR	ANTISPIN CODING PIN 29	457	OR	OPERATOR MON PANEL TEST SWITCH	574	OR	OPERATOR MON PANEL TEST SWITCH	802	WH	COUPLER DISENGAGE SOLENOID
225	BR	ANTISPIN CODING PIN 30	458	OR	OPERATOR MON PANEL TEST SWITCH	575	OR	OPERATOR MON PANEL TEST SWITCH	803	WH	COUPLER DISENGAGE SOLENOID
226	BR	ANTISPIN COD									

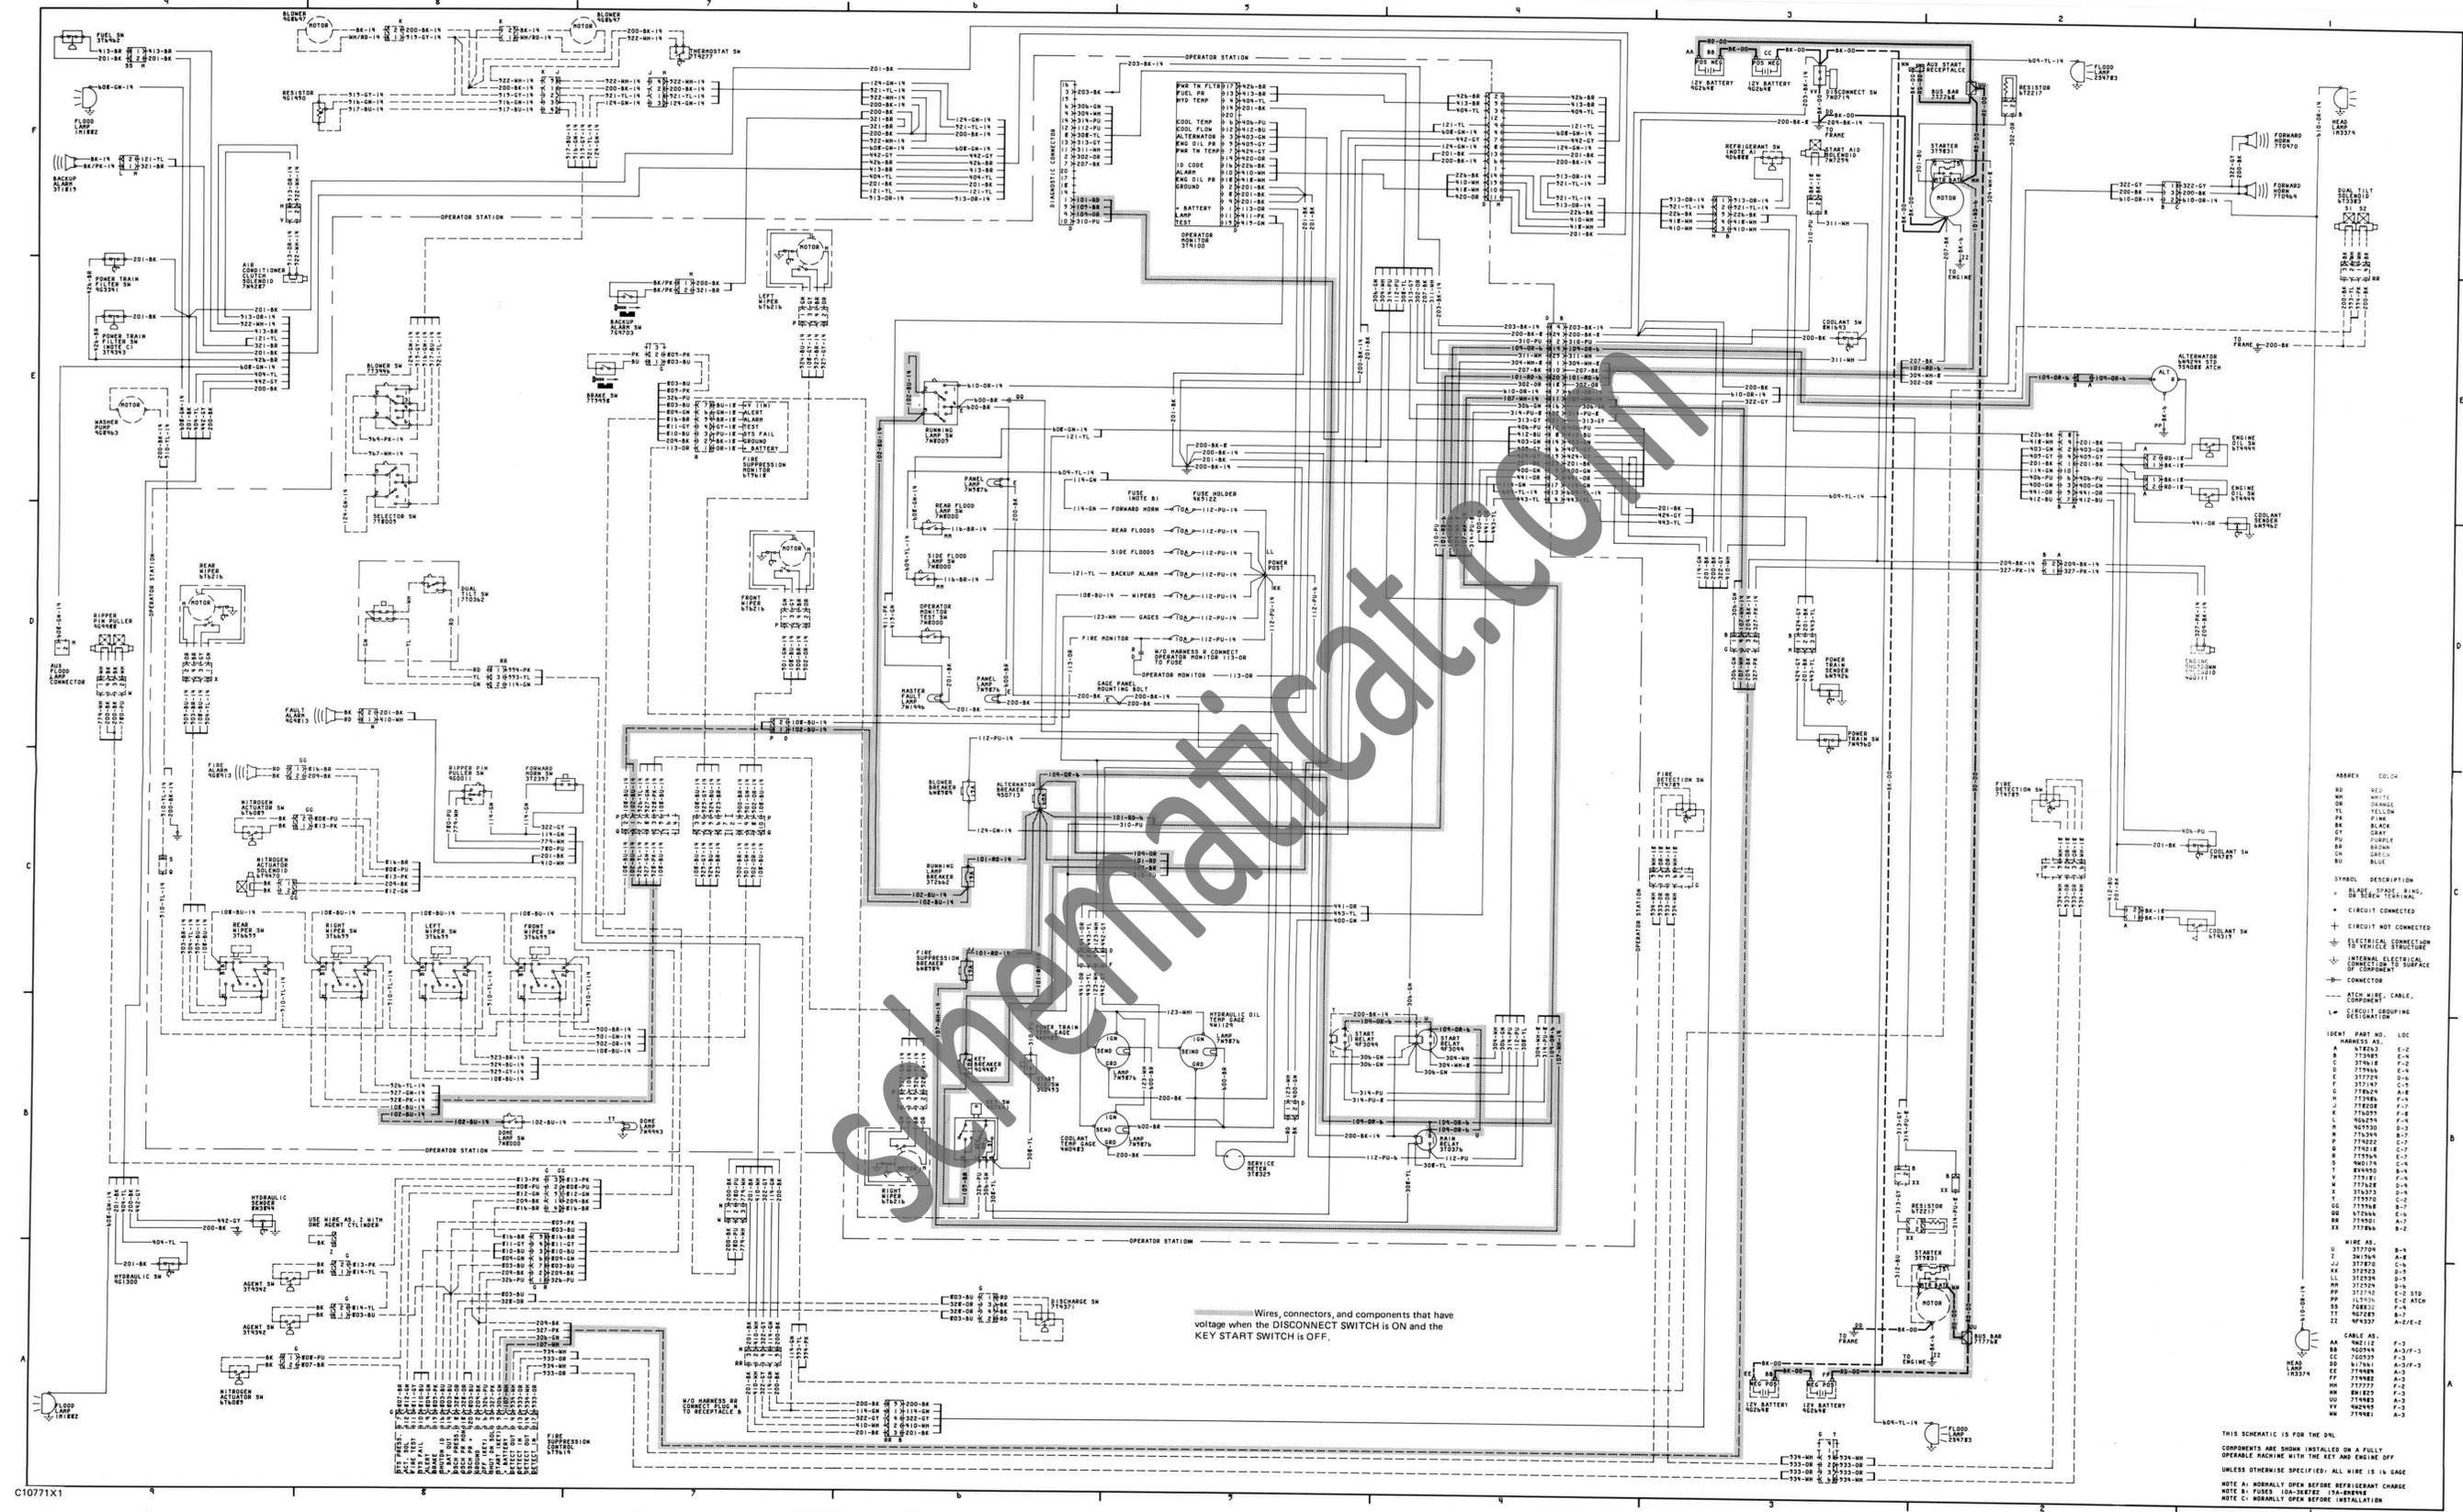

Wires, connectors, and components that have voltage when the DISCONNECT SWITCH is ON and the KEY START SWITCH is OFF.

ABBREV	COLOR
RD	RED
WH	WHITE
OR	ORANGE
YL	YELLOW
PK	PINK
BL	BLACK
GY	GRAY
PU	PURPLE
BR	BROWN
GN	GREEN
BU	BLUE

- SYMBOL DESCRIPTION
- DISCONNECT SWITCH
- CIRCUIT CONNECTED
- CIRCUIT NOT CONNECTED
- ELECTRICAL CONNECTION TO VEHICLE STRUCTURE
- CONNECTION TO SURFACE OF CONNECTOR
- CONNECTOR
- ATCH WIRE, CABLE, CONDUIT
- CIRCUIT GROUPING RESISTANCE

IDENT PART NO.	LOC
A 518203	E-2
B 732800	E-4
C 319614	F-2
D 737900	E-4
E 317700	D-6
F 317700	D-6
G 710000	F-2
H 710000	F-2
I 710000	F-2
J 710000	F-2
K 710000	F-2
L 710000	F-2
M 710000	F-2
N 710000	F-2
O 710000	F-2
P 710000	F-2
Q 710000	F-2
R 710000	F-2
S 710000	F-2
T 710000	F-2
U 710000	F-2
V 710000	F-2
W 710000	F-2
X 710000	F-2
Y 710000	F-2
Z 710000	F-2

THIS SCHEMATIC IS FOR THE DAL COMPONENTS ARE SHOWN INSTALLED ON A FULLY OPERABLE MACHINE WITH THE KEY AND ENGINE OFF UNLESS OTHERWISE SPECIFIED; ALL WIRE IS IN CASE NOTE A: NORMALLY OPEN BEFORE REFRIGERANT CHARGE NOTE B: FUSES 10A-34782C 15A-8789E NOTE C: NORMALLY OPEN BEFORE INSTALLATION