


Component Locations			
Description	Part Number	Machine Location	Schematic Location
Cylinder Gp - LH Lift	272-2767	1	E-4
Cylinder Gp - RH Lift	272-2766	2	E-5
Cylinder Gp - Ripper Lift	4T-9290	3	E-2
Cylinder Gp - Tilt	272-2768	4	E-3
Filter Gp - Hydraulic Oil	271-0872	5	C-8
Pump Gp - Main Hydraulic	270-6258	6	B-5
Tank Gp - Hydraulic & Fuel	269-8956	7	B-5
Valve Gp - Breaker Relief	191-5439	8	B-6
Valve Gp - Control (Bulldozer Lift)	271-0874	9	C-4
Valve Gp - Control (Bulldozer Tilt)	271-0875	10	C-3
Valve Gp - Control (Ripper)	271-0875	11	C-2
Valve Gp - LH Quick Drop	276-7928	12	E-4
Valve Gp - RH Quick Drop	276-7928	13	E-5
Valve Gp - Implement		14	C-2 thru C-4
Bank-1 (Lift)	273-5505		
Bank-2 (Lift, Tilt or Ripper)	273-5504		
Bank-1 (Lift, Tilt, Ripper)	271-0871		
Valve - Inlet & Relief	271-0876	15	C-4
Valve - Outlet	271-0877	16	C-2

Tap Locations Pressure, Sampling, and Sensor		
Tap Number	Description	Schematic Location
AA	Main Hydraulic Pump Pressure	C-6

Schematic

D7G Series 2 Track-Type Tractor Hydraulic System

7MB5000-UP
C7G1000-UP

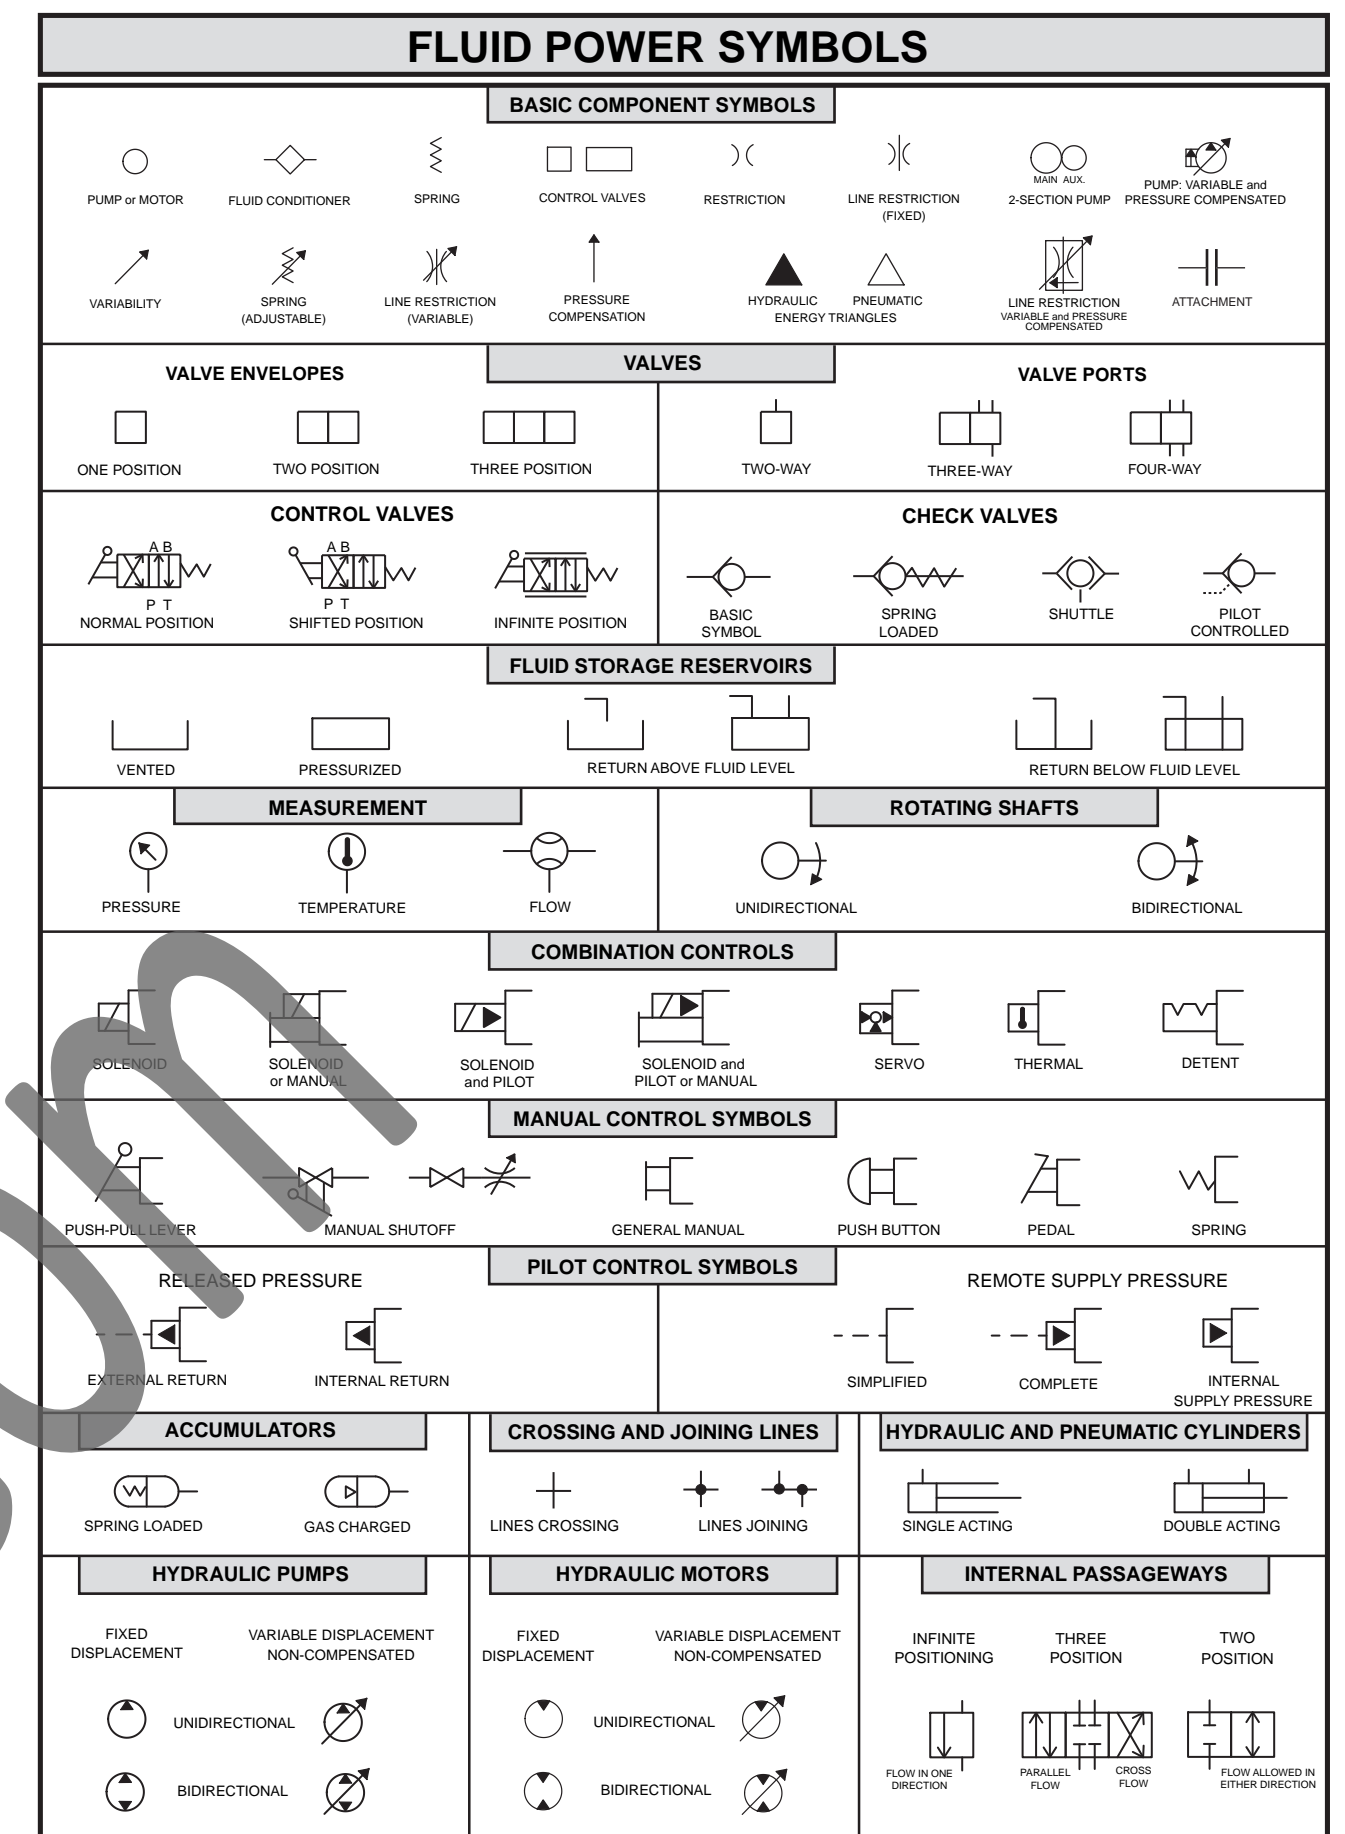

©2007 Caterpillar
All Rights Reserved

Printed in U.S.A.

